







Jednoduchý montážní



NÁVOD




Kurník

Montážní návod


A	M3. 5*50		35PCS
B	M3. 5*40		33PCS
C	M3. 5*25		24PCS
D	M3. 0*16		8PCS
E			2PCS
F	M3. 5*35		2PCS

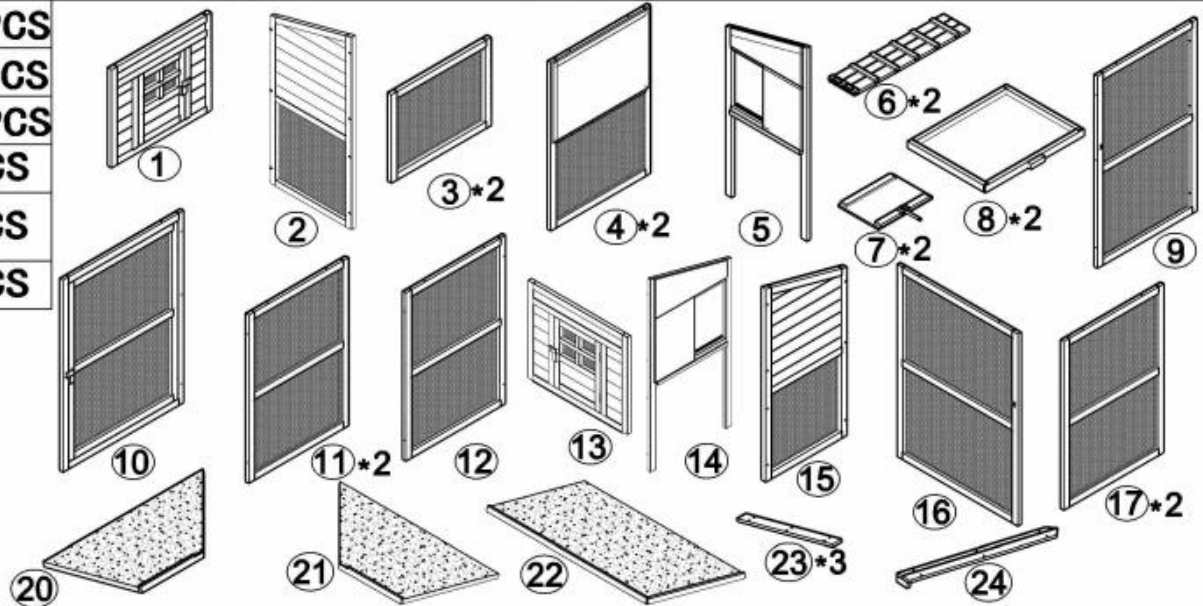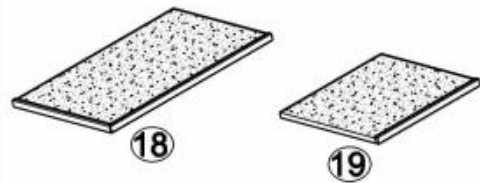


1 B 14PCS

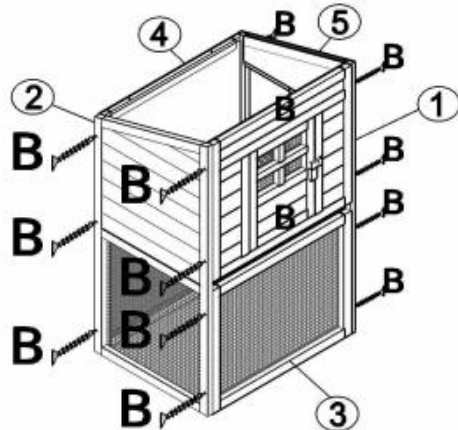


2 D 4PCS

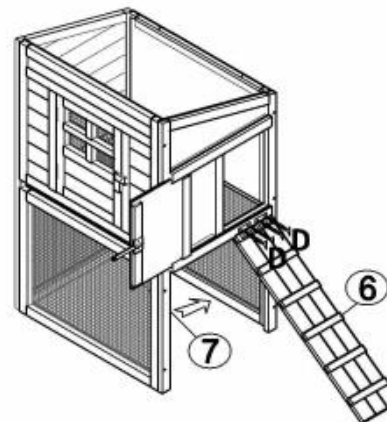


3 A 5PCS

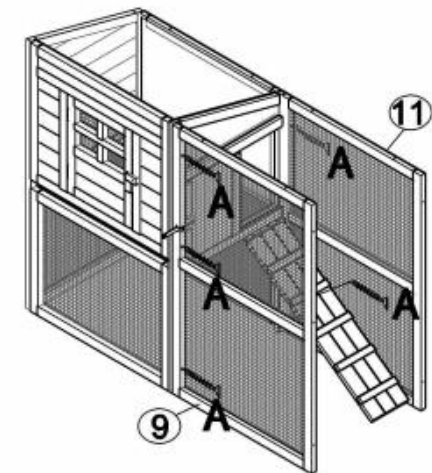


4 A 5PCS

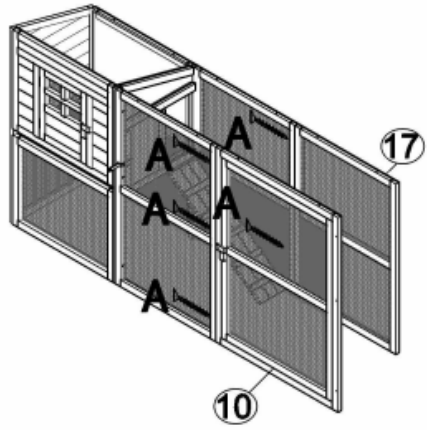


5 A 2PCS

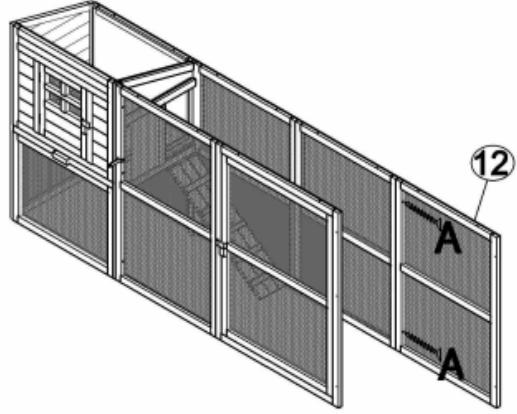


6 B 14PCS

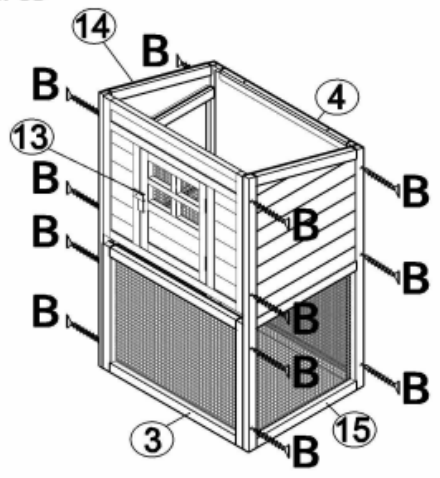


7 D 4PCS

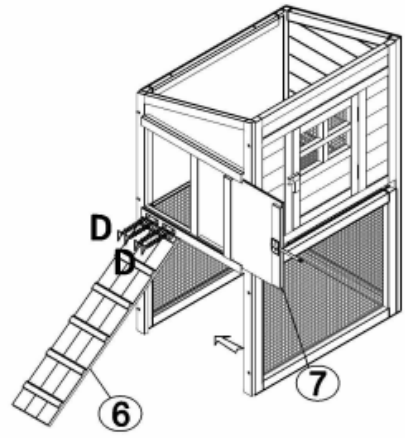


8 A 5PCS

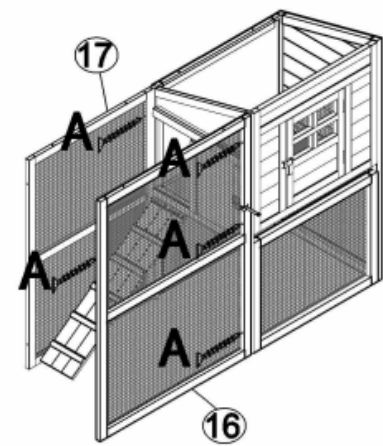


9 A 2PCS

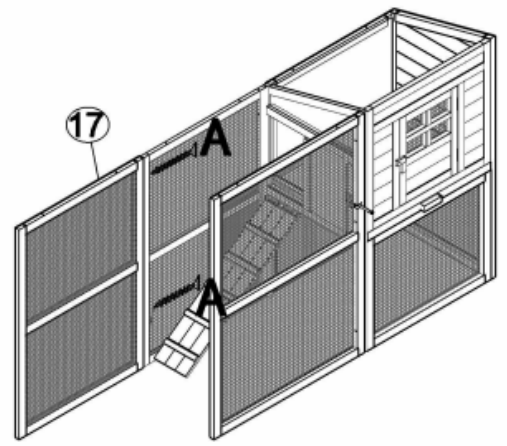


10 B 5PCS

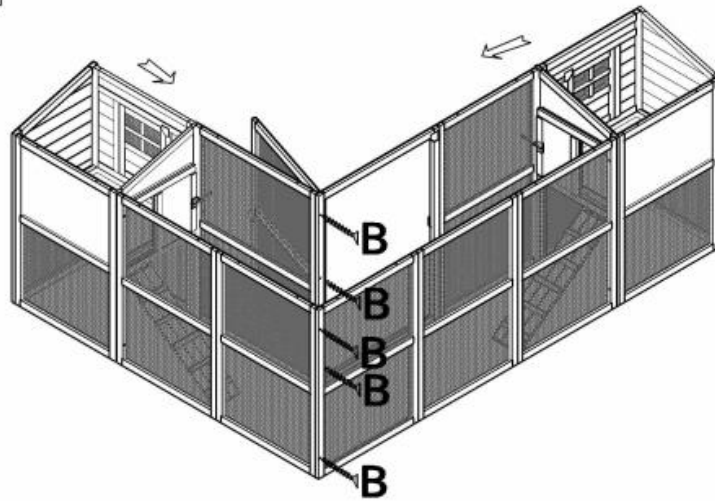


11 E 2PCS

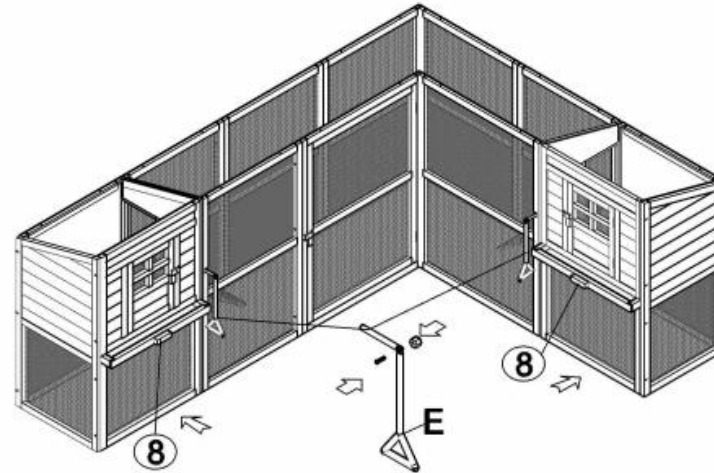


12

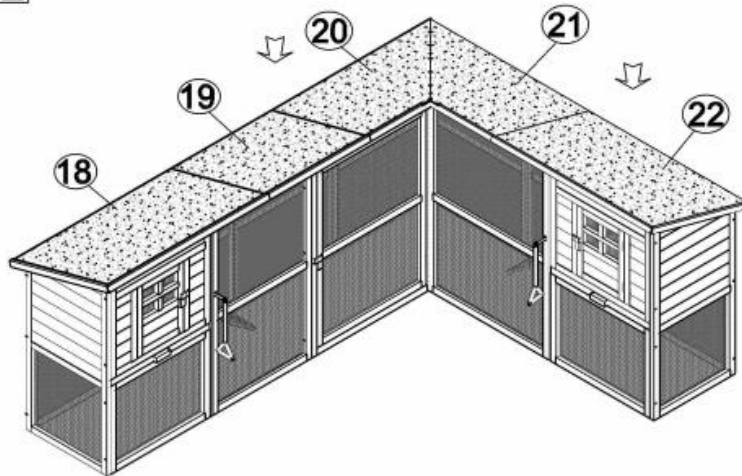


13 A 6PCS
F 2PCS

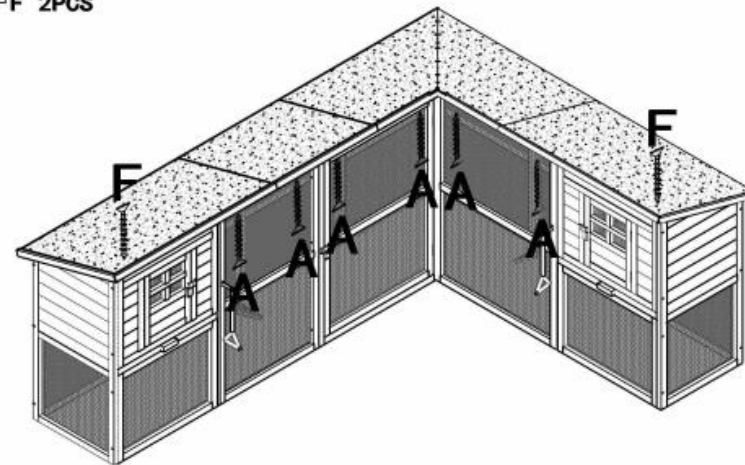


14^A 10PCS

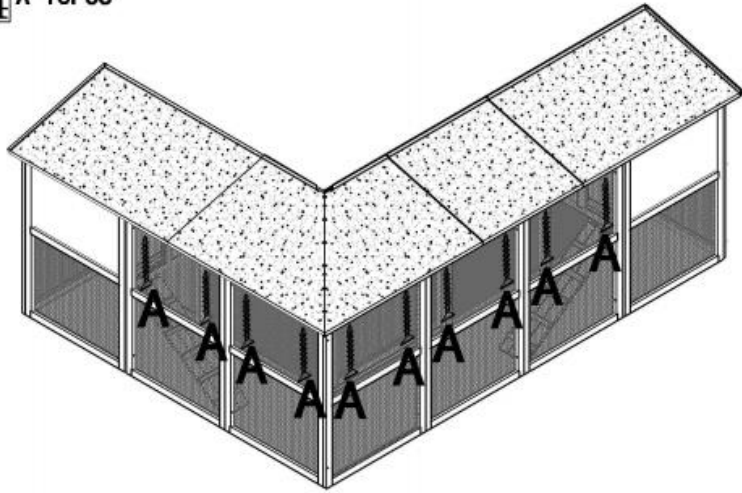

15^C 18PCS

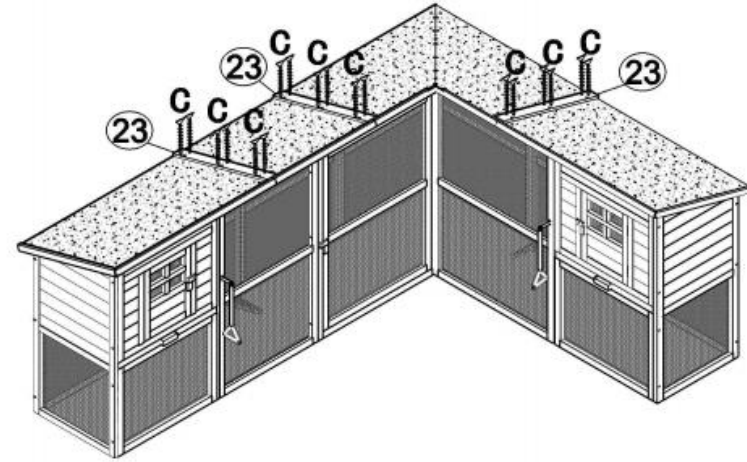

16^C 6PCS

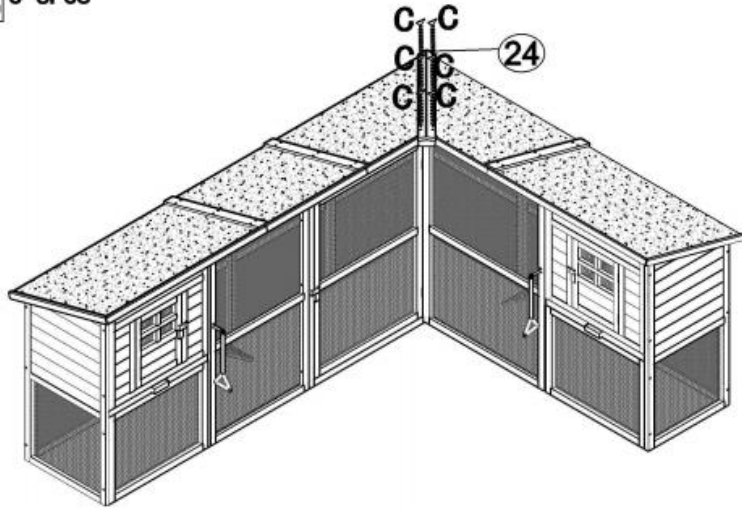

17

